# INSTALLATION, MAINTENANCE & SERVICE

ACCENT & LANDSCAPE | ZX11 Series 5 - 7W (450 - 675lm) | 12V | HK LED, RGB, Amber









#### Materials

6061-T6 Machined aluminum 304 stainless steel hardware

### **Fitting**

1/2"-14 NPS male thread

## **Dimming**

MLV / ELV


## **Installation and Adjustment**



### TURN OFF POWER BEFORE AND DURING WIRING TO POWER SUPPLY

Installation/Service must be done by a qualified electrician, and compliant with NEC and Local Codes.

- 1 Secure the fixture fitting to the 1/2"-14 NPS female thread on mounting device (plate, box, spike, etc.).
- 2 Connect 18 AWG solid input wires to the 12V power source using appropriate wire connectors.
- 3 Secure the mounting device with the fixture to mounting surface. For HK original mounting accessory, see the individual instruction for further detail of the installation.
- To adjust tilting position of fixture, loosen tilt adjustment screw with 9/64" hex key, aim the fixture body and tighten the screw to secure the fixture in place. Do not tighten more than necessary.
- 5 To adjust rotating position of the fixture, loosen rotation adjustment screw with 5/64" hex key, aim the fixture stem and tighten the screw to secure the fixture in place. Do not tighten more than necessary.

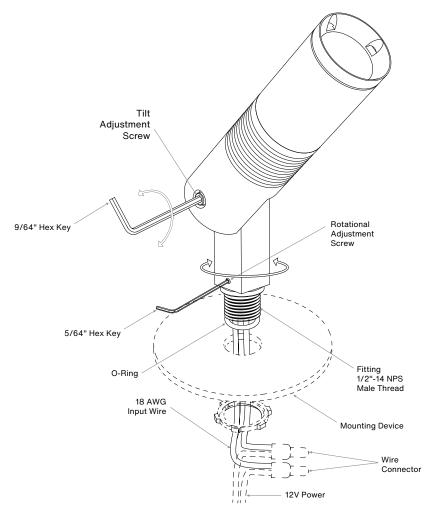






## **Lamp and Reflector Replacement**





# TURN OFF POWER AND KEEP FIXTURE COOL DURING MAINTENANCE SERVICE


- 1 Rotate hood counter-clockwise to remove it from fixture body, and access the LED module and reflector assembly.
- 2 Rotate the LED module and optical lens assembly counter-clockwise to remove it from the body.
- 3 Remove the optical lens from the LED module.
- 4 Replace LED module or optical lens as necessary and install the optical lens back onto the LED module.
- 5 Replace the fixture hood onto the fixture body. Make sure the O-ring is in the proper groove on the fixture body, to form a watertight seal.

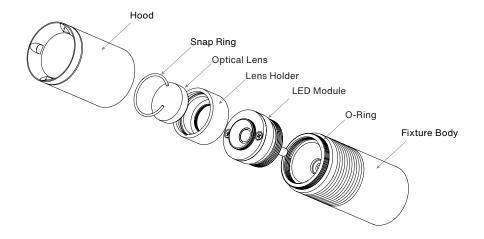

## **Glare Shield Adjustment & Optical Accessory Setting**

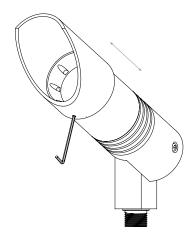

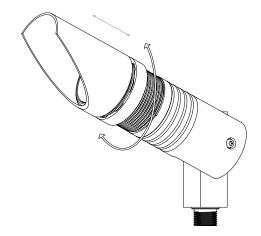

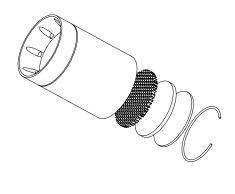

## **Glare Shield Setting For A&B Hood**

1 Use the 5/64" hex key to loosen the screw (8-32 UNC set screw) on the bottom of the glare shield. Move the glare shield to the desired position, and tighten the screw ( Ado not overtighten).

## **Glare Shield Setting For C Hood**

- Rotate the locking ring clockwise to move to the desired position.
- 2 Rotate the glare shield clockwise and move to the locking ring.
- 3 Lock the glare shield in place by rotating the locking ring counter-clockwise.

## **For Optical Accessory Setting**

- Rotate hood counter-clockwise and remove it from the body.
- 2 The hood accepts up to 3 accessories (hexcel louver, optical lenses, dichroic color filters, etc.). Secured in place with metal snap ring.
- 3 Pull out the snap ring from the hood.
- 4 Install or replace the accessory by placing it into the hood.
- 5 Replace the snap ring into the hood and push it into the groove (inside of the hood).
- 6 Rotate the hood clockwise to secure it back onto the body. Make sure the O-ring is in the proper groove on the fixture body, to form a watertight seal.

